

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the valve:

1. Tilt the handle (D3) into the on position.
2. Remove dust cap (D1).
3. Loosen grub screw (D2) using a 2.5mm A/F Allen key.
4. Pull the handle (D3) vertically away from the tap.
5. Hold the body of the tap (D6) firmly. Using a suitable tool unscrew the valve lock nut (D4).
6. Pull the old valve cartridge (D5) away from the tap.
7. Ensure that the valve chamber (D6) is clean of dirt and grit.
8. Place the new valve (D5) in the chamber (D6), ensuring the locators on the base of valve (D5) align with the recesses in the chamber of the tap (D6).
9. Reassemble the tap in the reverse order.

To replace the spout o-rings:

1. Loosen grub screw (A11) using a 2.5mm A/F Allen key.
2. Pull the spout (A10) vertically away from the body (B5).
3. Remove the old o-rings (B2 & B3) using a small screwdriver or similar.
4. If worn, remove the PTFE spacers (B1 & B4), note the upper spacer may remain inside the spout (A10).
5. Ensure the body (B5) and the inside of the spout base (A10) is clean of dirt and grit.
6. If required locate the new PTFE spacers (B1 & B4).
7. Carefully locate the new O-rings (B2 & B3) onto the body (B5).
8. Grease the O-rings thoroughly with silicone or alternative similar grease.
9. Reassemble the tap in the reverse order.

To replace the spray head:

10. Hold the barrel of the hand spray (A1).
11. Unscrew the chrome nut on pipe (A3).
12. Reassemble the tap in the reverse order.