



## **General Advice:**

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

## **To replace the spray head (if leaking from (A3) or damaged):**

1. Hold the barrel of the hand spray (B3).
2. Unscrew the hand spray head (X1).
3. Reassemble the tap in the reverse order.

## **If spray trigger (A6) is stiff or spray is too strong:**

1. Reduce the flow of water, an isolation (service) valve that should be installed before the non return valve (E2) turn this down.
2. If with the service valve reduced difficulties persist, install a 1-2 bar pressure regulating valve before the feed pipe to the hand spray.

## **If spray is reduced or blocked:**

1. Unscrew cover (A3).
2. Clean parts (A1 & A3)
3. Reassemble the tap in the reverse order.