


# Gino single lever

abode

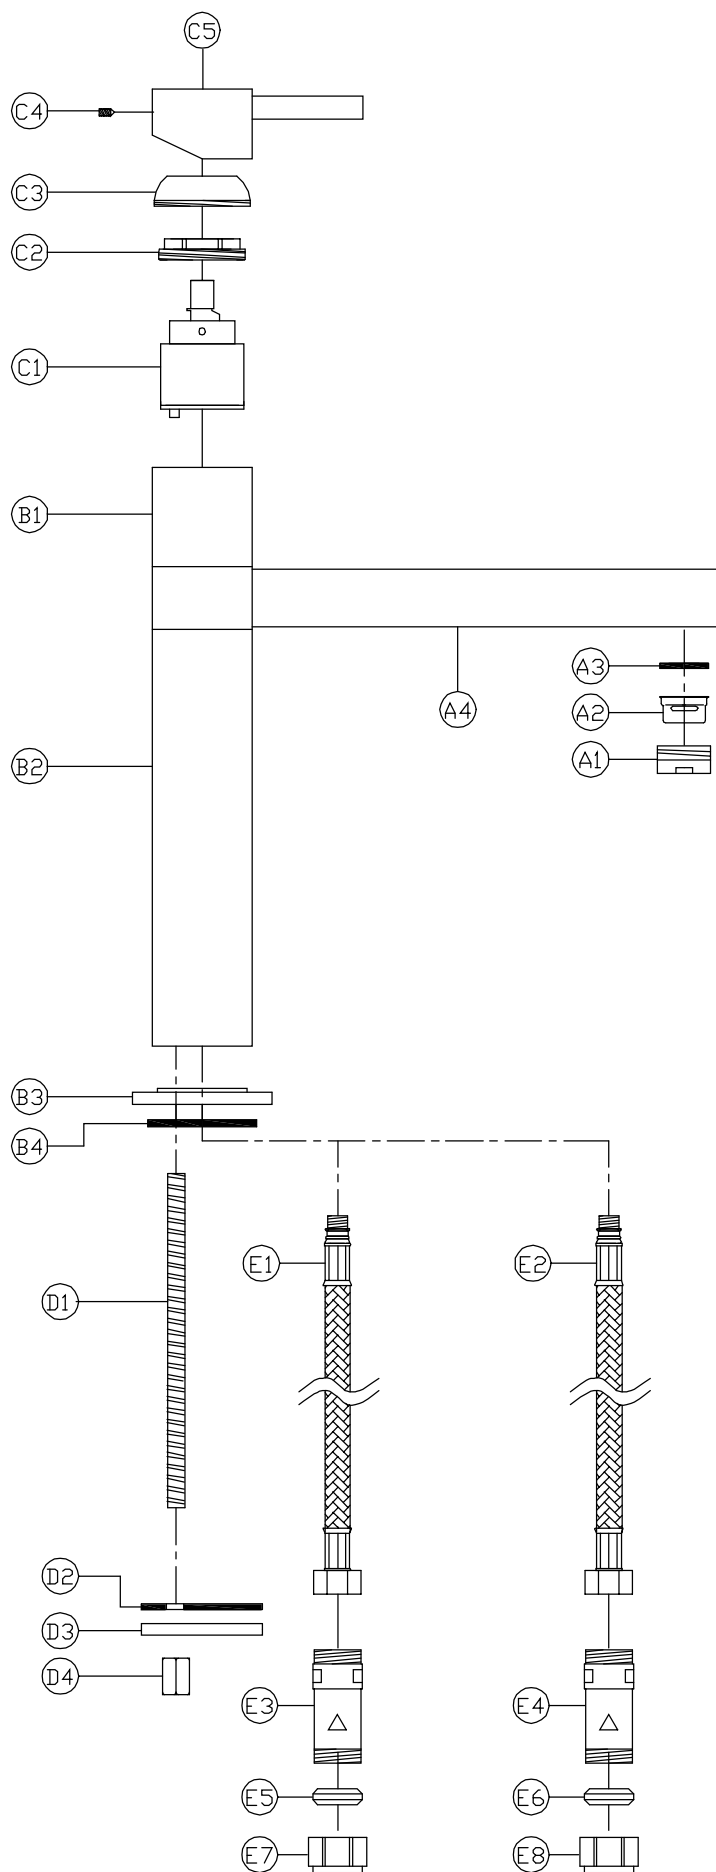

# Gino single lever

abode

## General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

## To replace the valve:

1. Loosen grub screw (C4) using a 2.5mm A/F Allen key.
2. Pull the handle (C5) away from the tap body (B1) . if the handle is tight, lever the handle (C5) away using a flat screwdriver between the handle (C5) and valve lock nut cover (C3)
3. Unscrew the valve lock nut cover (C3).
4. Hold the body of the tap (B1) firmly. Using an adjustable spanner or socket unscrew the valve lock nut (C2).
5. Pull the old valve cartridge (C1) away from the tap.
6. Ensure that the valve chamber (B1) is clean of dirt and grit.
7. Place the new valve (C1) in the chamber (B1), ensuring the locators on the base of valve (C1) align with the recesses in the chamber of the tap (B1).
8. Reassemble the tap in the reverse order.

## To replace the spout o-rings:

Sections B1 & B2 are threadlocked to preserve alignment therefore the body can not be disassembled to service the o-rings.