

Propus single lever

abode

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the valve:

1. Remove dust cap (C7) at the base of handle (C5) using a small screwdriver or fingernail.
2. Loosen the grub screw (C6) at the bottom of the handle (C5) using an 2.5 mm a/f Allen key.
3. Pull the handle (C5) horizontally away from the tap body (B1).
4. Unscrew decorative cover (C4) horizontally away from the tap body (B1).
5. Pull the red valve limiter (C3) horizontally away from the valve (C1).
6. Hold the tap (B1) firmly at the base and unscrew the valve locking nut (C2) using a spanner.
7. Remove the old valve cartridge (C1).
8. Clean any debris from the chamber of the tap (B1).
9. Locate the new valve (C1) into the tap chamber (B1); ensure the pegs on the valve (C1) align with the recess in the chamber (B1).
10. Reassemble the tap in the reverse order ensuring that the valve limiter (C3) is aligned as shown with the '+' and '-' to the top.

To replace the spout o-rings:

1. Whilst holding body (B1) pull the spout (A4) vertically, using a twisting action if required.
2. Remove the old o-ring (A6) using a small screwdriver or similar.
3. If worn, remove the white PTFE rings (A5 & A7).
4. Ensure the inside of the body (B1) and the spout base (A4) is clean of dirt and grit.
5. If required locate the new white PTFE spacers rings (A5 & A7).
6. Carefully locate the new O-ring (A6) onto the spout base (A4).
7. Grease the O-ring (A6) thoroughly with silicone or alternative similar grease.

Note: the PTFE rings (A5 & A7) are designed to be a one way snap fit, when removing the spout some force may be required.

To improve the water flow rate:

1. Unscrew the aerator housing (A1)
2. Remove aerator (A2) installed in the tap and replace with the high flow aerator (A2B) supplied separately with the tap.
3. Reassemble the aerator in the reverse order.