


Solera single lever

abode

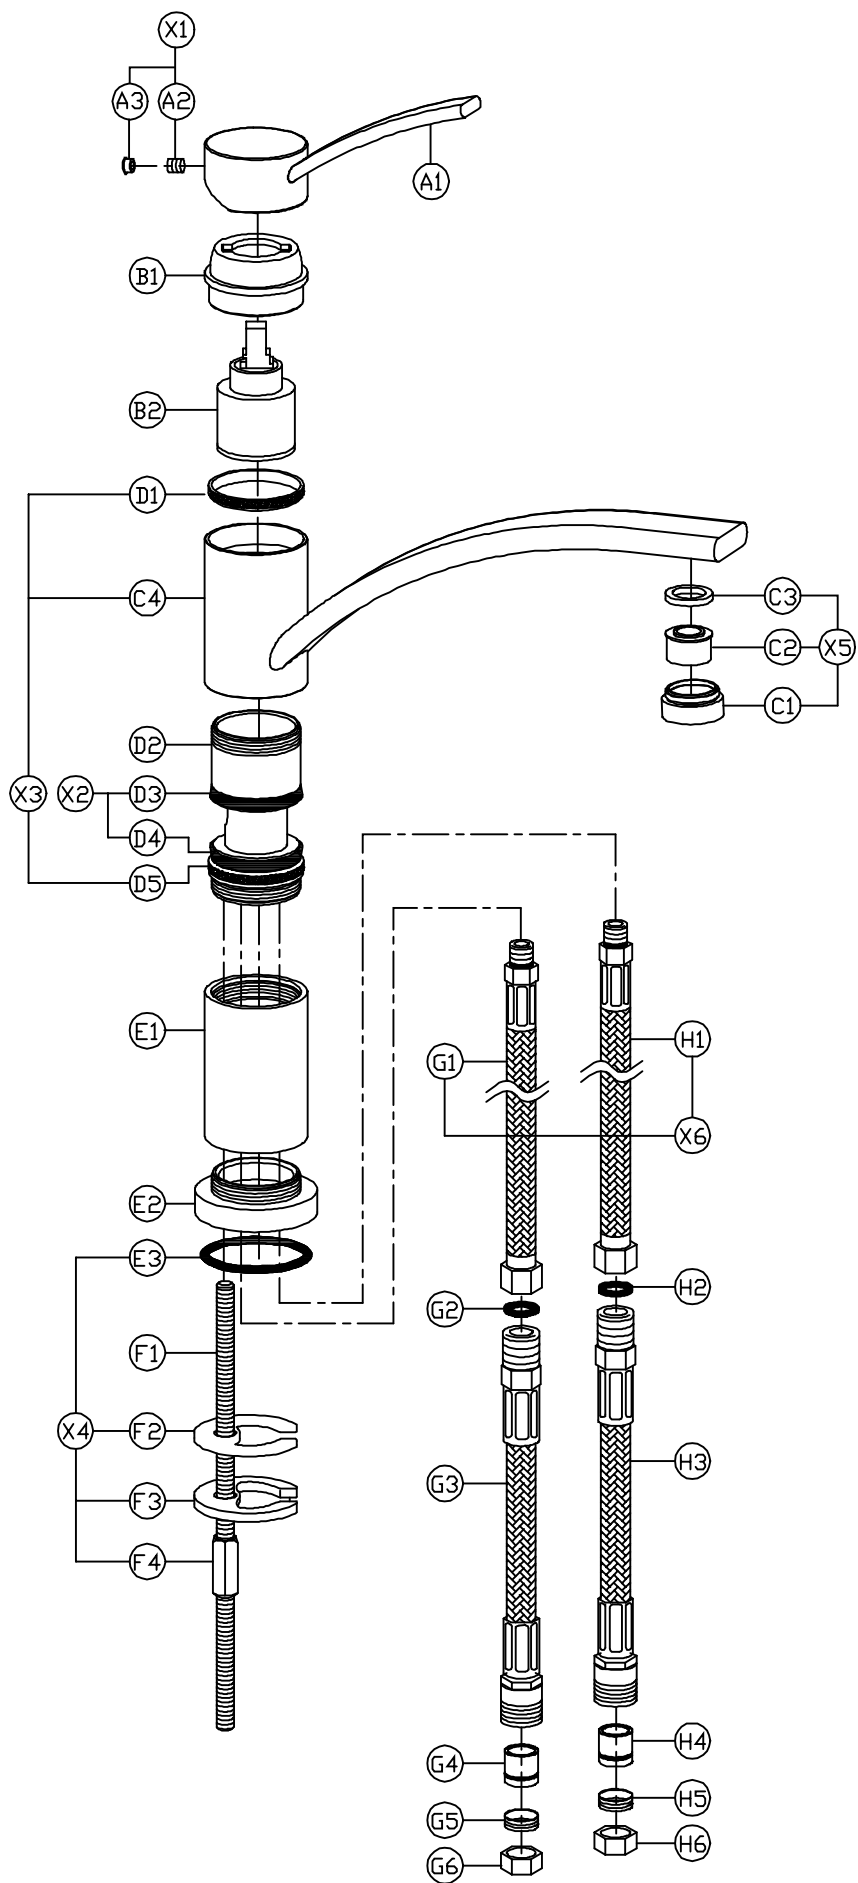

Solera single lever

abode

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the valve:

1. Turn the handle (A1) into a position where the grub screw at the rear of the handle is visible.
2. Remove the dust cap (A3) using a small screwdriver.
3. Loosen grub screw (A2) using a 2.5mm A/F Allen key.
4. Pull the handle (A1) Vertically away from the tap.
5. Hold the body of the tap (E1) firmly. Using a spanner or key unscrew the valve lock nut (B1).
6. Pull the old valve cartridge (B1) away from the tap.
7. Ensure that the valve chamber (D2) is clean of dirt and grit.
8. Place the new valve (B1) in the chamber (D2), ensuring the locators on the base of valve (B1) align with the recesses in the chamber of the tap (D2).
9. Reassemble the tap in the reverse order.

To replace the spout o-rings:

1. Turn the handle (A1) into a position where the grub screw at the rear of the handle is visible.
2. Remove the dust cap (A3) using a small screwdriver.
3. Loosen grub screw (A2) using a 2.5mm A/F Allen key.
4. Pull the handle (A1) Vertically away from the tap.
5. Hold the body of the tap (E1) firmly. Using a spanner or key unscrew the valve lock nut (B1).
6. Hold the body of the tap (E1) firmly. Pull the spout (C4) firmly vertically.
7. Remove the old o-rings (X2) using a small screwdriver or similar, note the orientation and position of the o-ring before removing them.
8. If damaged, remove the black spacers (D1 & D5).
9. Ensure the inside of the body (D4) and the spout inner (C4) is clean of dirt and grit.
10. If required locate the new the black spacers (D1 & D5).
11. Carefully locate the new O-rings (X2) onto the body (D2).
12. Grease the O-rings thoroughly with silicone or alternative similar grease.
13. Reassemble the tap in the reverse order.