


# Tate single lever

abode

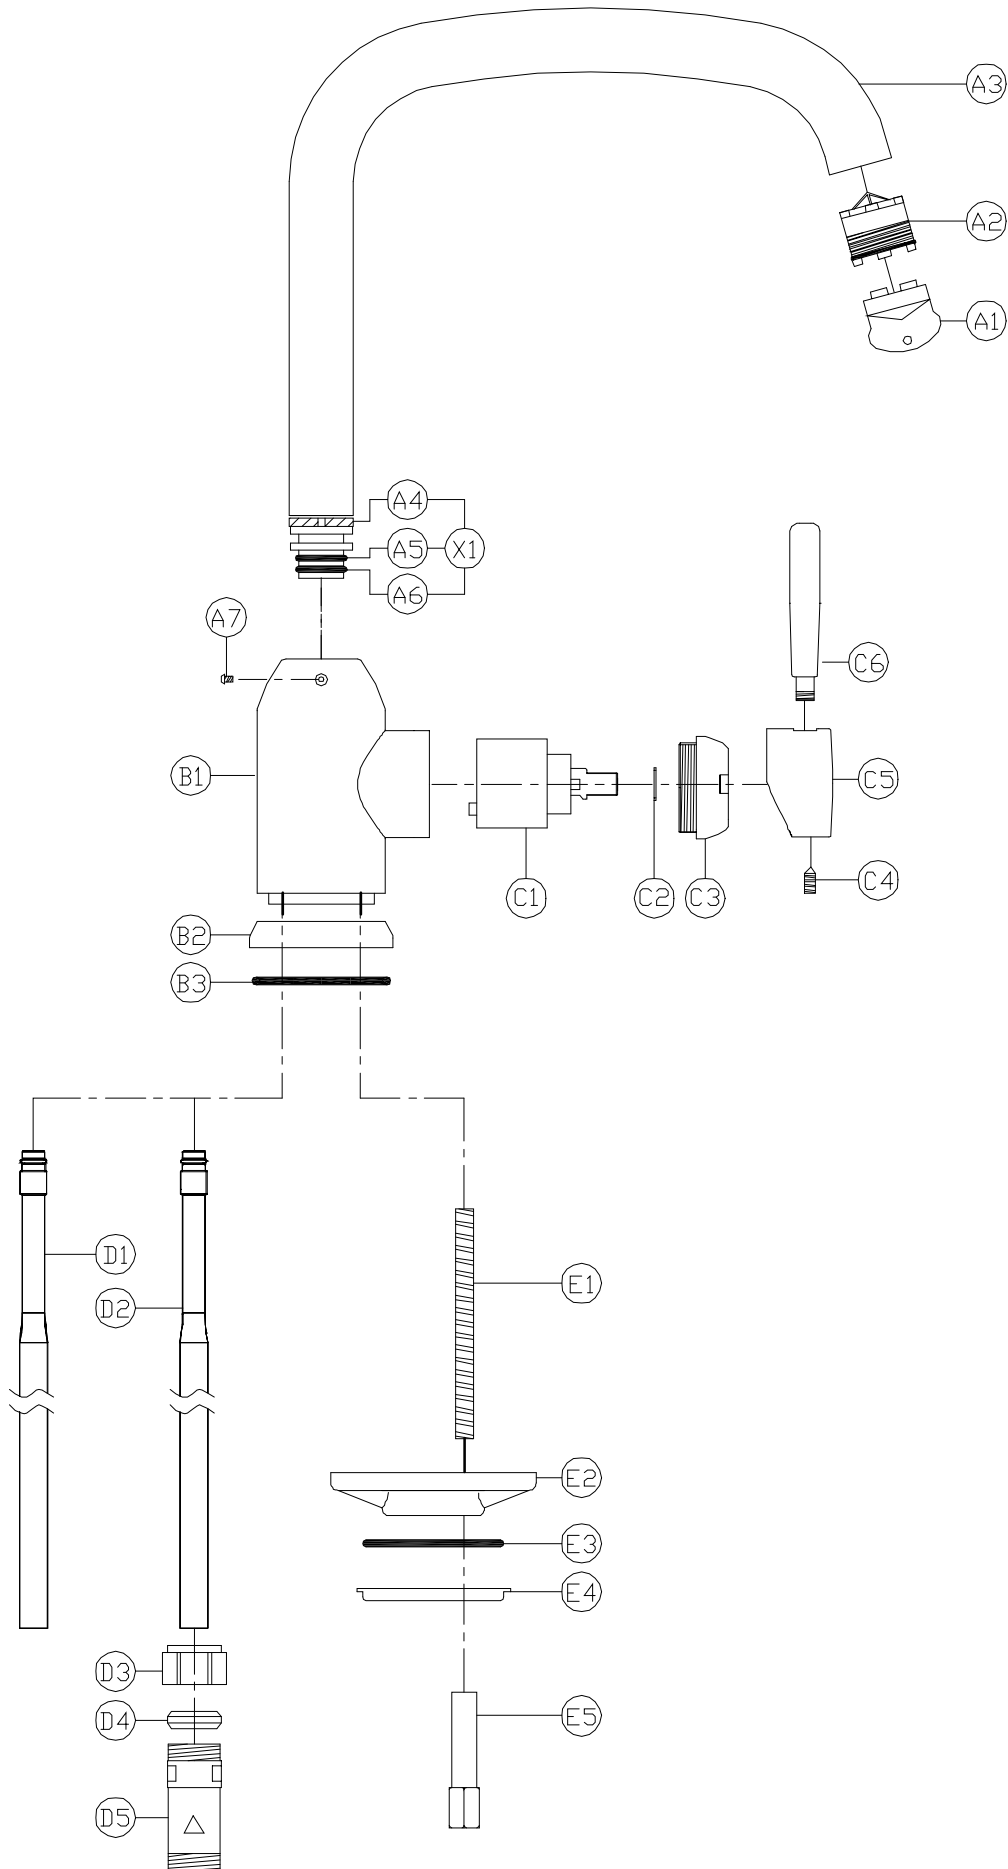

# Tate single lever

abode

## General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

## To replace the valve:

1. Loosen the grub screw (C4) at the bottom of the handle (C5) using an 2mm a/f Allen key.
2. Pull the handle (C5) horizontally away from the tap body (B1).
3. Hold the tap (B1) firmly at the base and unscrew the valve locking nut (C3) using a spanner.
4. Remove the spacing washer (C2) from the valve (C1).
5. Remove the old valve cartridge (C1).
6. Clean any debris from the chamber of the tap (B1).
7. Locate the new valve (C1) into the tap chamber (B1); ensure the pegs on the valve (C1) align with the recess in the chamber (B1).
8. Reassemble the tap in the reverse order.

## To replace the spout o-rings:

1. Loosen grub screw (A7) on the rear of body (B1) using a 2.5mm A/F allen key.
1. Pull the spout (A3) vertically away from the body (B1).
2. Remove the old o-rings (A5 & A6) using a small screwdriver or similar.
3. If worn, remove the white PTFE spacer (A4).
4. Ensure the inside of the body (B1) and the spout base is clean of dirt and grit with a soft wet cloth.
5. If required locate the new white PTFE spacer (A4).
6. Carefully locate the new O-rings (A5 & A6) onto the spout base (A3).
7. Grease the O-rings (A5 & A6) thoroughly with silicone or alternative similar grease.
8. Reassemble the tap in the reverse order.

## To clean the aerator:

1. Hold the spout (A3) firmly.
2. Using the key (A1) supplied with the tap unscrew anticlockwise the aerator (A2).
3. Clean the aerator (A2) then reassemble in the reverse order.