


Decadence Single Lever

abode

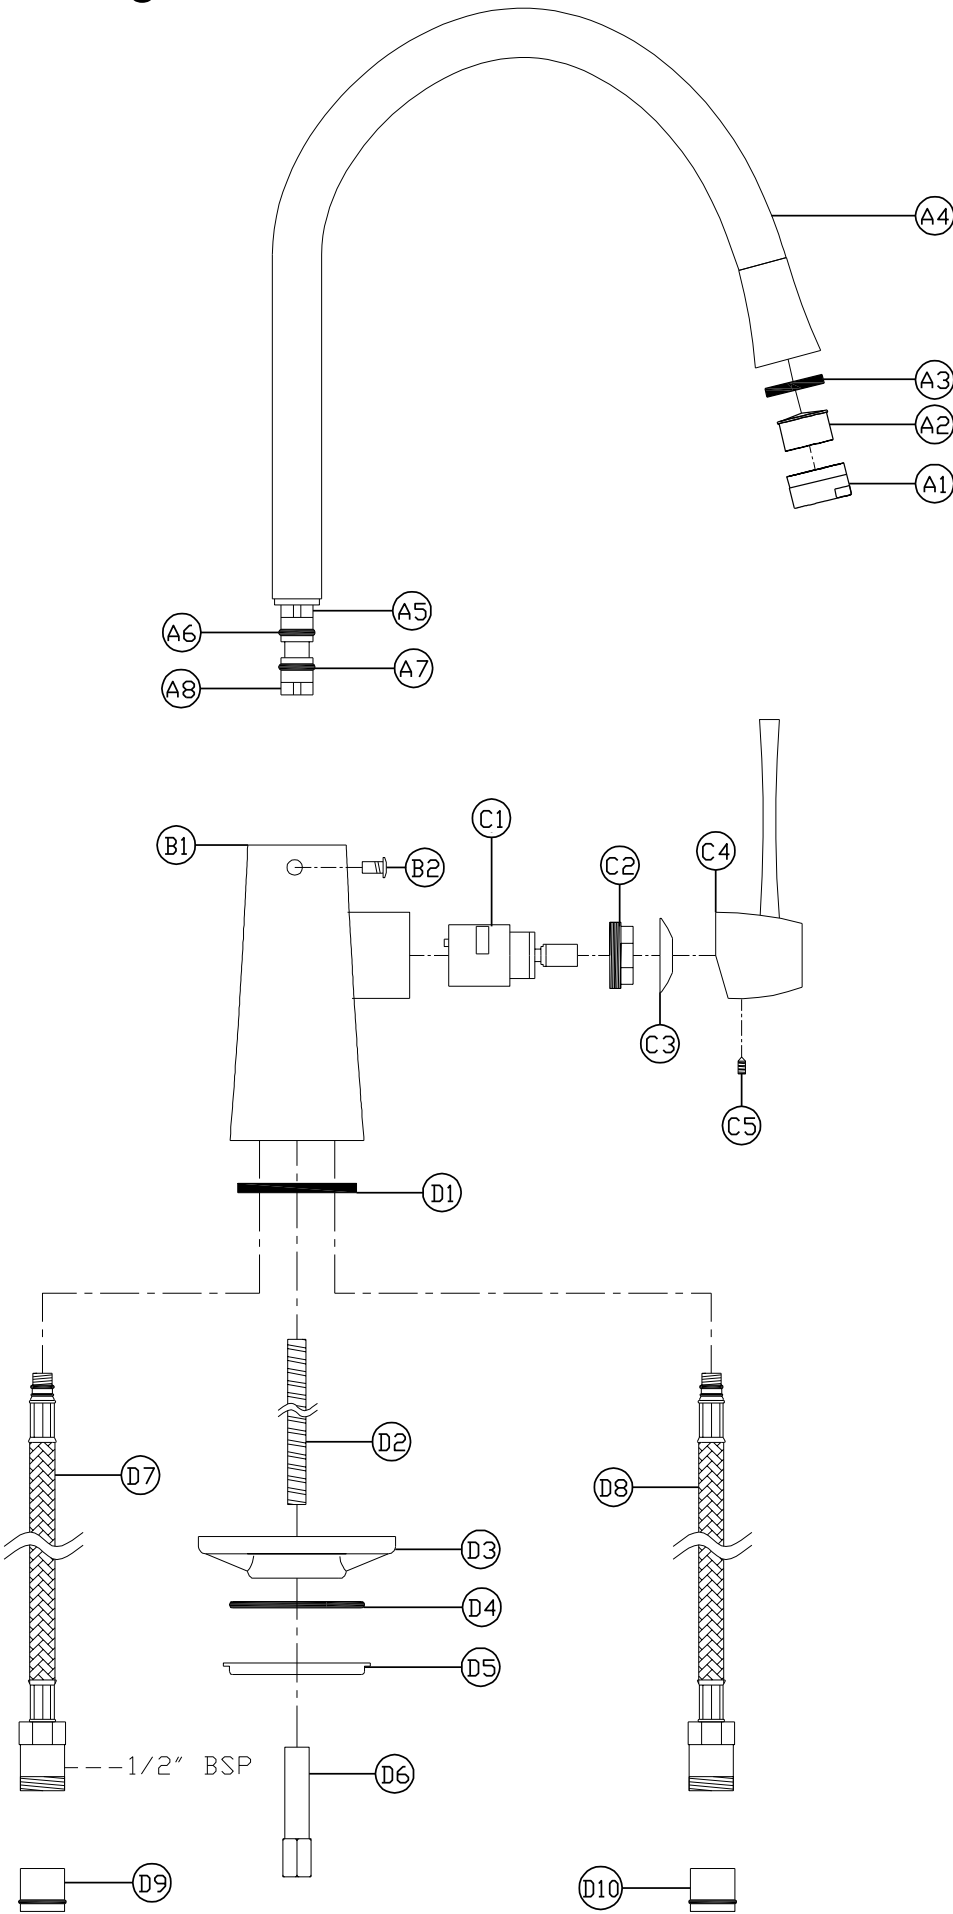

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the valve:

1. Loosen grub screw (C5) on the underside of handle (C4) using a 2mm A/F allen key.
2. Pull the handle (C4) horizontally away from the tap.
3. Prise away the decorative valve cap (C3) from the tap body (B1) using a small screwdriver.
4. Hold the body of the tap (B1) firmly and remove the valve locking nut (C2) with a 21mm open spanner
5. Pull away the old valve cartridge (C1) away from the tap body (B1)
6. Clean the Inside of chamber (B1) with a soft wet cloth.
7. Reassemble the tap in the reverse order. **(Note; when inserting the new valve, be sure to locate the pegs on the bottom of the valve (C1) with corresponding holes inside the tap body (B1).)**

To replace the spout o-rings:

1. Loosen grub screw (B2) on the rear of body (B1) using 3mm A/F allen key.
1. Pull the spout (A4) vertically away from the body (B1).
2. Remove the old o-rings (A6 & A7) using a small screwdriver or similar.
3. If worn, remove the white PTFE spacers (A5 & A8).
4. Ensure the inside of the body (B1) and the spout base is clean of dirt and grit with a soft wet cloth.
5. If required locate the new white PTFE spacers (A5 & A8).
6. Carefully locate the new O-rings (A6 & A7) onto the spout base (A4).
7. Grease the O-rings thoroughly with silicone or alternative similar grease.
8. Reassemble the tap in the reverse order.