

Important Technical Data

Minimum operating pressure 0.5 bar
Maximum operating pressure 5.5 bar*

Maximum hot water temperature 70°C*
Recommended hot water temperature 46°C

Note: If these temperatures or pressures are exceeded, even for short periods, damage can result. In these instances a thermostatic mixing or pressure reducing valve should be installed.

All Abode taps are either WRAS approved or manufactured in accordance with recognised European standards. Please ensure that your Abode Kitchen mixer is fitted in accordance with Local Water Byelaws.

These installation guidelines have been prepared for your direction and you must exercise due care at all times. We do not accept responsibility for problems that may occur through improper installation. Whilst assembling the tap take care not to accidentally loosen any screwed assemblies.

Abode is a registered trademark of Abode Home Products Limited.

Manufacturers Product Reference



©Abode
11/2016

Ratio Pull Out Mixertap



5 Year warranty Terms and Conditions

In the unlikely event that you should experience any defect in the materials or workmanship of your new Abode mixer within 5 years of purchase, the purchaser's sole remedy shall be the replacement (at the manufacturer's discretion) of all or any part of the product that is defective. All working parts and valves are guaranteed for a period of 5 years from purchase. Decorative surface finishes and O-rings are guaranteed for 1 year from the date of purchase provided that our advice concerning care has been observed and no scouring agents have been used. This is provided that the mixer or tap has been used for normal domestic purposes and that the care, installation and maintenance instructions have been observed. The warranty extends to the original purchaser only.

Marks, scuffs and scratches caused by improper installation or accidental damage are not covered by this guarantee. Neither are shade variations or any damage or defect caused by incorrect installation or abuse of the fitting.

Care Instructions for your Kitchen Sink Mixer

To maintain the appearance of this tap, ensure that it is regularly cleaned only using a clean, soft damp cloth. A solution of warm water and a mild liquid detergent may be used where necessary, and then the fitting rinsed thoroughly and wiped dry. Any other cleaning action will invalidate your warranty.

If the mixertap has a diffuser it should be unscrewed and cleaned periodically in warm water.

Abrasive cleaners, scouring cleaners and acidic cleaners **must not be used** under any circumstances. Avoid contact with all solvents (including chlorinated solvents, ketones or acetones as these may result in surface deterioration or etching). Also avoid contact with any harsh household chemicals such as oven cleaners, drain cleaners, rust removers, paint strippers and toilet bowl cleaners, bar keepers friend or Brasso.

Please leave these instructions for your customer.


abode

Abode Home Products Limited, Unit L, Zenith Park, Whaley Road, Barnsley, S75 1HT.
Tel: 01226 283434 Fax: 01226 282434 www.abode.eu

All errors and omissions excepted.

Parts and Contents

Key	Description	Qty
A	Spout	1
B	Mixertap body	1
C	Handle	1
D	Upper seal	1
E	Sink or worktop	
F	White triangular stabilizer (for stainless steel sinks only)	1
G	Rubber horseshoe	1
H	Metal horseshoe	1
I	Hot water rigid inlet pipe	1
J	Hot water flexible inlet pipe	1
K	Mixed water rigid pipe	1
L	Studded rod	2
M	Fixing nut	2
N	Hose head nut	1
O	Rubber seal	1
P	Spout head adaptor	1
Q	Std. Mesh aerator	1
R	High flow aerator	1
S	Spout head	1
T	Cold water rigid inlet pipe	1
U	Cold water flexible inlet pipe	1
V	Mixed water nylon hose	1
W	Small rubber seal	1
X	Hose weight	1
Y	Hose weight screw	2

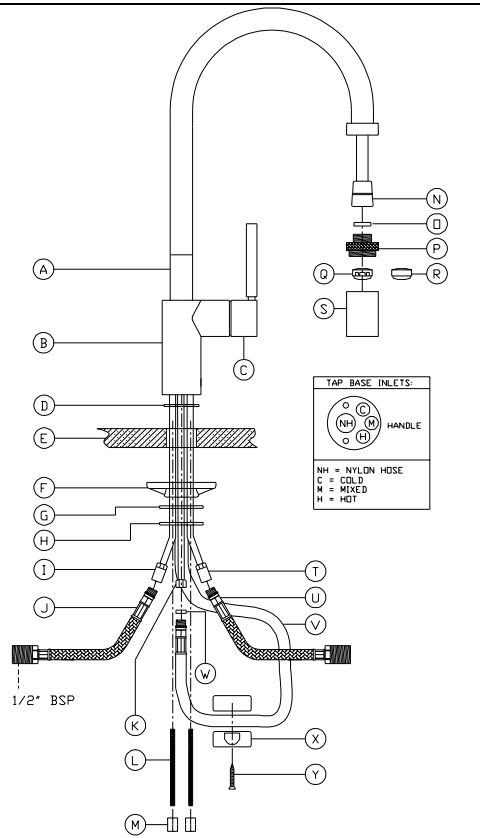

Installation Instructions:

Preparation

Before installing the new mixer it is essential that you thoroughly flush through the supply pipes in order to remove any remaining solder, swarf or impurities from your system. Failure to carry out this simple procedure could cause problems or damage to the workings of the mixertap.

We strongly recommend installing particle filters and isolation valves to both the hot and cold feed pipes in an accessible position. This will help to prevent premature failure of the valves and ease any future maintenance.

All parts should be removed from their packaging and inspected for any transport damage prior to installation.

Shut off your water heating system and ensure that your mains stopcock is closed. Open the lowest hot and cold taps in the house and allow the water to run until the cold-water storage tank and pipes are fully empty. Please note, the hot water storage cylinder (if applicable) will always remain full.

This mixertap requires a 35mmØ tap hole, if replacing an existing tap, remove the tap & clean the end of the feed pipes using wire wool the tap hole area should be free from dirt and sealant. Loosely position the tap and tail pipes to check if any alteration to the existing pipework is required, if this is the case do this now.

The installation of this product should respect requirement IRN R090.

Installation

1. Screw in the studded rods (L) into the base of the tap (B).
2. Place the upper seal (D) onto the body of the tap (B).
3. Screw the hot water rigid pipe (I) into the base of the tap (marked H on inlet diagram).
4. Screw the cold water rigid pipe (T) into the base of the tap (marked C on inlet diagram).
5. Screw the mixed water rigid pipe (K) into the base of the tap (marked M on inlet diagram).
6. Place the mixertap (B) onto the sink or worktop, pass the rigid tail pipes (I,K&T), studded rods (L) and mixed water nylon hose (V) through the taphole.
7. If fitting the tap to a stainless steel sink the white triangular stabilizer (F) can be placed where shown to help to stabilize the weight of the tap.
8. Pass the rubber and then metal horseshoe (G&H) over the studded rods (L) and around the tail pipes.
9. Fasten the fixing nuts (M) securely onto the fixing studs (L) to fix the tap into its correct location.
10. Screw the cold water flexible pipe (U) into the rigid cold water inlet pipe (T).
11. Screw the hot water flexible pipe (J) into the rigid hot water inlet pipe (I).
12. Screw the mixed water nylon hose (V) into the mixed water rigid tail pipe (K) using the small rubber seal (W) to make a watertight connection. Note: the nylon hose should be untwisted and able to move freely. The rigid inlet pipes (I,K &T) can be carefully bent to allow more space around the nylon hose.
13. Fasten the hose weight (X) around the lowest point of the nylon hose (V) using screws (Y).
14. Connect the hot and cold tail pipes (J&U) to the water mains using a ½" BSPx15mm compression fittings.

Note: the hose weight is designed to pull the hose straight after use; it will not pull the spout head automatically back into the spout and will have to be returned by hand.

After installation

Once you have visually checked the new fittings and connections, ensure that all taps are closed except the new mixer tap which should be left open. Turn on the water supply at the mains stop cock. As the system starts to refill, check carefully for leaks. Once you are fully satisfied that there are no leaks, turn on the water heating. Clean the tap to remove any marks created during installation as instructed then place the cloth bag that has been provided to protect the tap until it is ready for use.