

Oxbury Monobloc



Warranty:

All Abode products are made using the highest quality materials and components, to ensure that they meet or exceed all UK or European Standards. All products are thoroughly tested, and quality checked. All products are backed with a comprehensive warranty and we are confident that they will give many years of trouble-free service.

The warranty applies to products used for normal domestic purposes and where the installation, care and maintenance instructions have been observed. The warranty extends to the original purchaser only.

Details of Warranty duration and Terms & Conditions for each product type can be found on our website (www.abodedesigns.co.uk).

Installation:

1. Screw in the fixing stud (D) into the base of the tap (A).
2. Place the base plinth (B) then upper seal (C) onto the base of the tap (A).
3. Screw the hot & cold flexi tail pipes (I & J) into the base of the tap (A).
4. Place the mixertap (A) onto the sink or worktop and pass the flexi tail pipes (I & J) and fixing stud (D) through the taphole.
5. If fitting the tap to a stainless-steel sink, then white triangular stabilizer (E) can be placed where shown to help to stabilize the weight of the tap.
6. Pass the rubber O-ring (F) and then metal horseshoe (G) over the fixing stud (D) and around the tail pipes.
7. Fasten the fixing nut (H) securely onto the fixing stud (D) to fix the tap into its correct location.
8. Connect the hot and cold tail pipes (I & J) to the water mains using ½" BSP x 15mm compression fittings.

Changing aerator:

The tap can be fitted with a 5 lpm aerator (L). To switch from standard flow (A2) to the 5 lpm (L) follow steps below:

1. Unscrew aerator case (A1) by hand.
2. Replace standard flow aerator (A2) with 5 lpm flow aerator (L).
3. Screw aerator case (A1) back onto spout ensuring seal (A3) is in place as shown.

Changing Lever design:

1. Unscrew ceramic lever (A5) and decorative top (A6) by hand and pull vertically away from handle base stem (A4).
2. Place solid metal handle (K) onto stem of handle base (A4).
3. Screw decorative top (A6) onto top of handle base stem (A4) to tighten handle in place.

After Installation:

Once you have visually checked the new fittings and connections, ensure that all taps and drains are closed except the new product which should be **left open**. Turn on (reconnect) the water supplies, check carefully for leaks around the installation and product function. Once you are sure of no leaks, close the new product and recheck for leaks, turn on the water heating power. Clean and dry the product of any marks from installation then cover the product with the bag provided to protect it until use.

Important Technical Data

Minimum operating pressure:

0.3 bar (Standard aerator) 1.5 bar (With Flow limiter)

Maximum operating pressure: 5 bar*

Flow characteristics:

Single flow
Maximum hot water temperature: 60°C*

Recommended hot water temperature: 46°C

*If these temperatures or pressures are exceeded, even for short periods, damage can result and will void your warranty. In these instances, reduce the incoming water temperature and or install a pressure reducing valve. Ensure that your Abode product is fitted in accordance with Local Water Byelaws or regulations by a qualified installer.

These installation guidelines have been prepared for your direction and you must exercise due care at all times. We do not accept responsibility for problems that may occur through improper installation. Whilst installing the product take care not to accidentally loosen any screwed assemblies.

Manufacturers Product Reference: AT2220, AT2221, AT2222

©Abode - 03/2024

Important Care Instructions for your Product:

To maintain the appearance of this product, ensure that it is regularly cleaned only using a clean, soft damp cloth. A solution of warm water and a mild liquid detergent may be used where necessary, and then the fitting rinsed thoroughly and wiped dry. Any other cleaning action or use of common domestic cleaning products will invalidate your warranty.

If the product has a plastic aerator insert at the end of the spout it should be unscrewed and the plastic internal insert only removed and cleaned or descaled to maintain flow performance. Do not use descaling solution on any decorative metal housing, rinse the insert thoroughly before reattaching in the reverse order.

Abrasive cleaners, scouring cleaners and acidic cleaners **must not be used on this product** under any circumstances. Avoid contact with all solvents (including chlorinated solvents, ketones or acetones as these may result in surface deterioration or etching). Also avoid contact with any harsh household chemicals such as oven cleaners, drain cleaners, rust removers, paint strippers and toilet bowl cleaners, bar keepers friend or Brasso.

Parts and Contents:

Key	Description	Qty
A	Mixertap body	1
B	Base plinth	1
C	Upper seal	1
D	Fixing stud (M8 x 120mm)	1
E	White triangular stabilizer	1
F	Rubber O-ring	1
G	Metal horseshoe	1
H	Fixing nut	1
I	Hot Flexi Tail (1/2" F)	1
J	Cot Flexi Tail (1/2" F)	1
K	Solid metal handle pack	2
L	5 litres per minute aerator	1

Installation Instructions:

Preparation

Before installing the new product it is essential that you thoroughly flush through the supply pipes in order to remove any remaining solder, swarf or impurities from your system. Failure to carry out this simple procedure could cause problems or damage to the workings of the product or reduce performance invalidating the warranty.

We strongly recommend best practice of installing particle filters and isolation valves to both the hot and cold feed pipes in an accessible position. This will help to prevent premature failure of the valves and ease any future maintenance.

 
All parts should be removed from their packaging and inspected for any transport damage prior to installation.

Shut off (isolate) your hot and cold water supply locally at the point of installation before continuing with the installation. If the water cannot be isolated locally then turn off the mains stopcock and power to any heating system, now open the lowest tap or drain point in the system until both hot and cold supplies are fully drained.

This product requires a 35mmØ tap hole, if replacing an existing product, remove it and clean the end of the hot and cold feed pipes using wire wool, the tap hole area should be free from dirt and sealant. Loosely position the product and fittings to check if any alteration to the existing pipework is required, if needed, do this now. If the product is single flow (see section important technical data "flow characteristics") then non return (check) valves must be installed to comply with regulations. Some products are supplied with non-return valves this will be noted in the instructions.


⚠ Correct use of Flexible Hose Connectors

If this product is supplied with flexible hose connections for ease of installation you must observe the conditions below, failure to observe these standard installation guidelines will invalidate the warranty for your product.

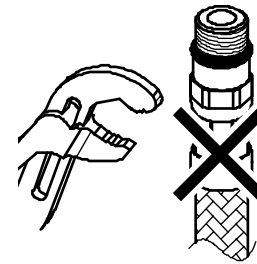


Always screw the flexi hoses into the product only by hand, until feeling mechanical rest, a spanner **must not** be used on the product end of the connecting hose.

 Always use the pipes provided and not an alternative substitute

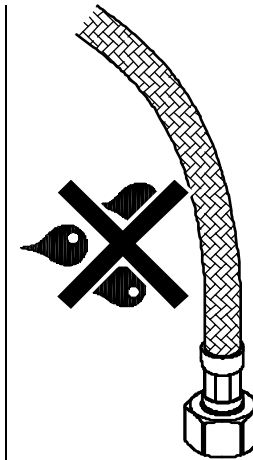


 The braiding on the flexible hose **must not** be in contact with anything else, for example chemicals, internal or external room walls or dissimilar metals or materials or sharp objects.

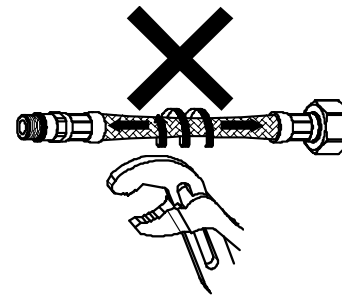


Never twist or stretch the flexible hose during installation.

 
Do not overtighten the hexagonal end of the hose connecting to the supply feeds when using a spanner causing the hose to twist.

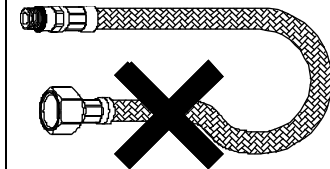

 
Hoses must not be double bent in multiple directions kinked or looped.

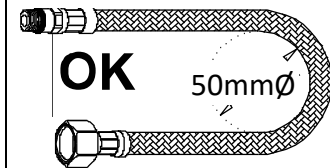

 Observe the minimum bend radius of 50mm.

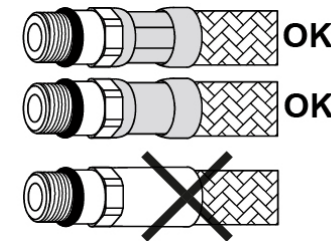

 Before assembling the hose to the product ensure the hose ferrule has been crimped (as highlighted) on both ends of the hose after the braided hose sleeve.

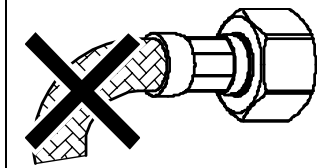

Both ends of the hose must have a minimum 50mm straight section before any bend.

