


Bayenne Monobloc with Spray

abode

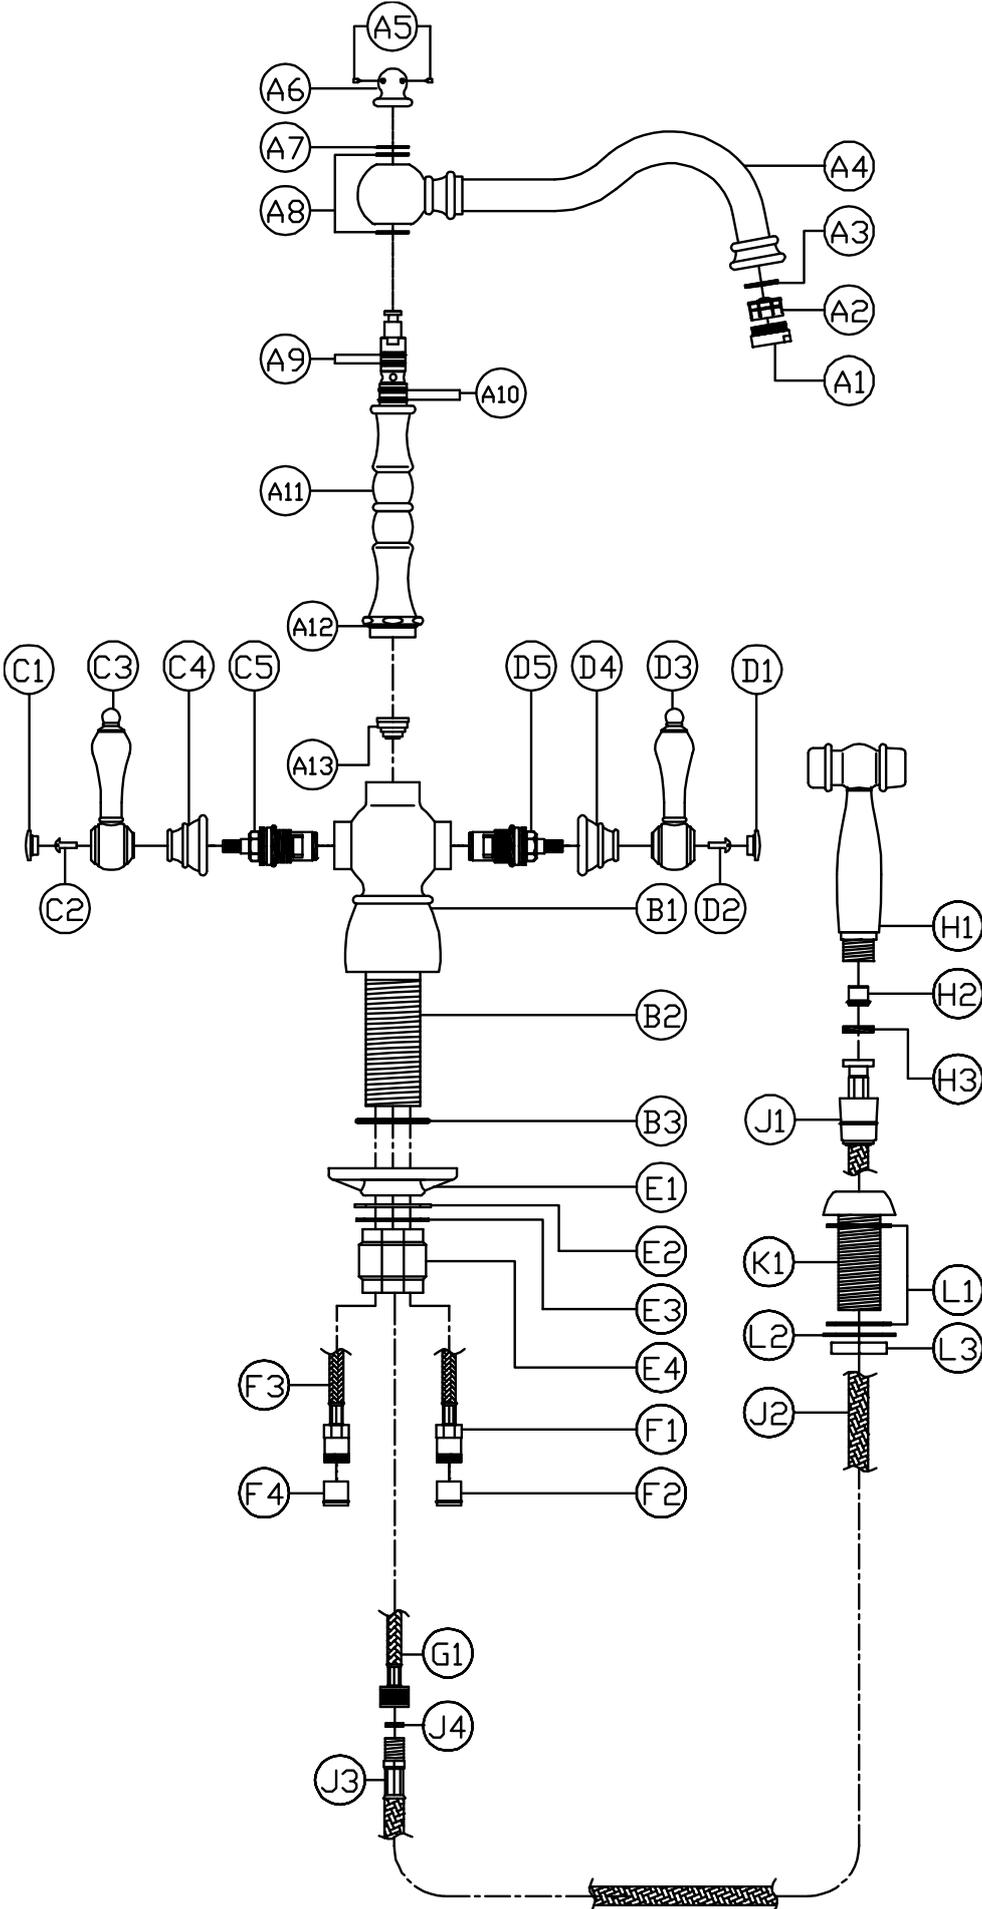

Bayenne Monobloc with Spray

abode

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the hot valve:

1. Carefully lever away the hot screw cover cap (C1) from the handle (C3).
2. Unscrew handle screw (C2) and pull the handle (C3) away from valve (C5)
3. Unscrew by hand decorative valve cover (C4) from valve (C5).
4. Using a 17mm ring spanner and whilst holding the tap body firmly, unscrew hot valve (C5) from the tap body (B1)
5. Clean the inside of the valve chamber of the tap body (B1) with a soft wet cloth.
6. Locate the new valve (C5) and reassemble the tap in reverse order.

To replace the spout o-rings:

1. Using a 2mm Allen key unscrew grub screws (A5) and gently lever (A6) away from the top of (A11).
2. Gently ease away spout (A4) from the lower spout section (A11) ensuring O-ring (A7) and PTFE spacers (A8) are kept safe.
3. Carefully swap o-rings (A9) & (A10) with the replacements using a precision screwdriver remove.
4. Reassemble the tap in reverse order.

Note that o-ring (A12) is a non-moving part and thus should not require changing. Parts (A7) & (A8) can be replaced if supplied although these are non-sealing.

To replace the diverter:

1. Unscrew the spout (A11) at its base by hand. Note that if it is not possible to unscrew (A11) by hand you should use an adjustable spanner with a soft cloth placed in between the jaws of the spanner and the flats of the spout base.
2. With the provided diverter removal tool unscrew the diverter valve (A13)
3. With a soft damp cloth clean the inside of spout chamber (B1)
4. Replace the new diverter (A13) and reassemble the tap in reverse order.

To replace the handspray and seal:

5. Lift handspray (H1) from base (K1)
6. Unscrew handspray (H1) from hose connection (J1)
7. Screw the new handspray onto connection (J1) ensuring rubber seal (H3) is in place.

To convert the tap to have a independent cold spray:

In case of low pressure supply, parts required from abode M15 male stop end, 1/2" Male x M15 female adapter.

1. Unscrew spout locking collar (A3) and remove the spout.
2. Unscrew diverter (A6) from the tap body (B1) it does not matter if the diverter (A6) is damaged in the process.
3. Disconnect the spray hose (J3) from outlet pipe (G1).
4. Screw the M15 male stop end (not shown) into the outlet pipe (G1). Ensure to use the 15mm seal (G4).
5. Screw the spray hose (J3) into the 1/2" Male x M15 female adapter (not shown) using the 15mm seal.
6. Connect the 1/2" Male x M15 female adapter to a tee from your cold water supply. Please note that the maximum cold water pressure should be no more than 2 bar. If your pressure is higher then a pressure reducing valve must be installed.