


Bayenne Single Lever with Spray

abode

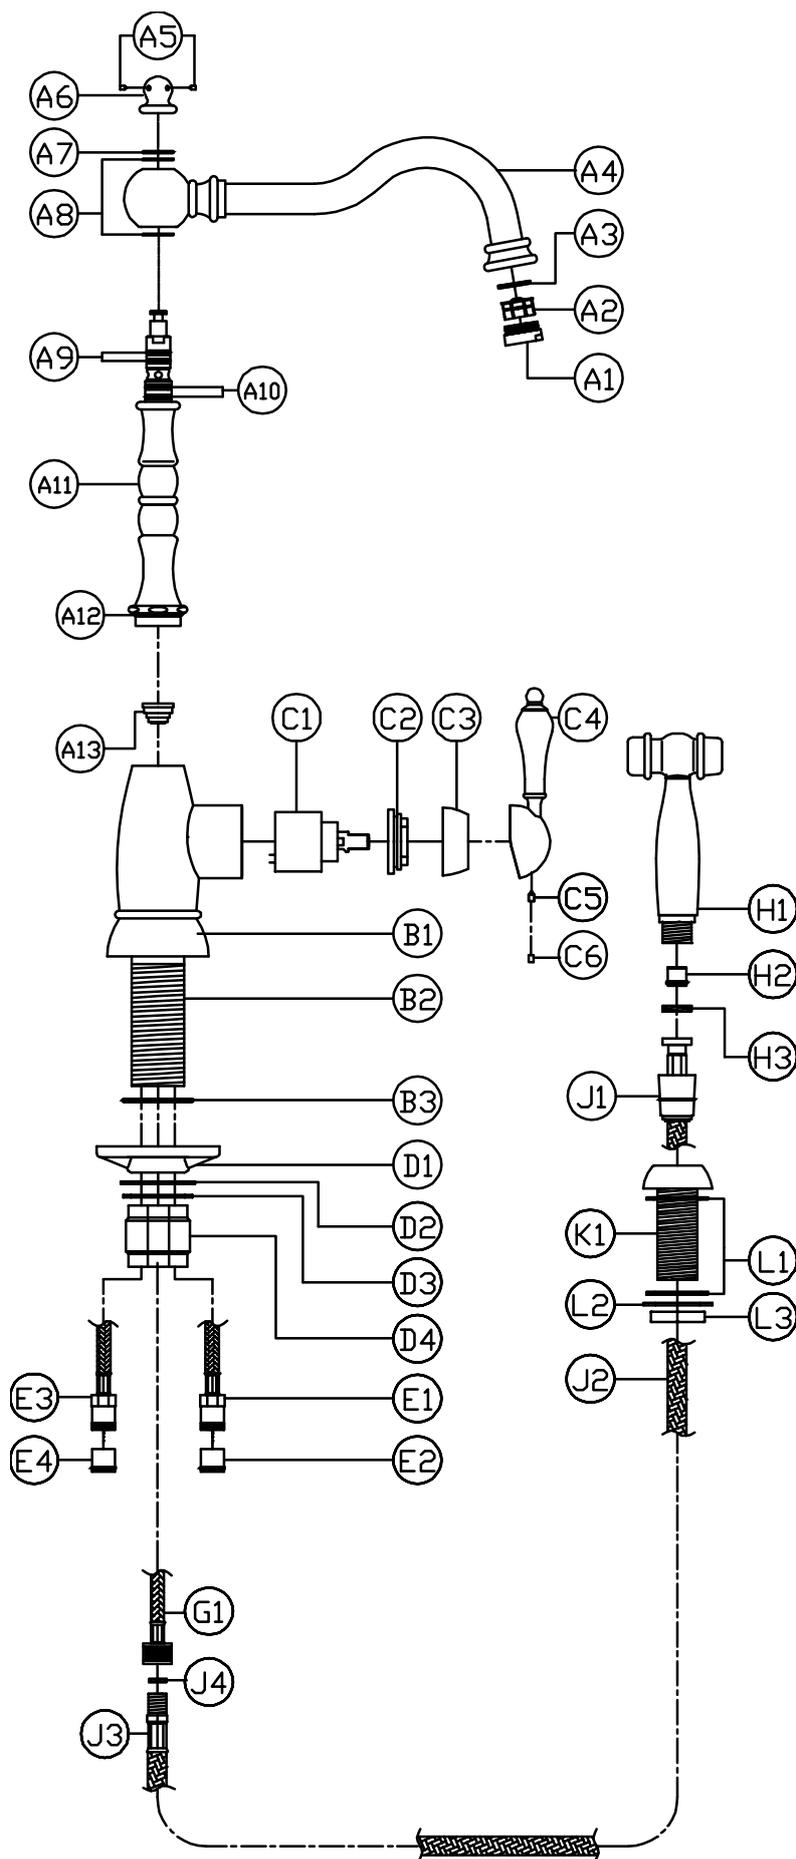

Bayenne Single Lever with Spray

abode

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the valve cartridge:

1. Carefully remove rubber bung (C6) and unscrew grub screw (C5) using a 2mm Allen key.
2. Pull handle (C4) away from the valve (C1) stem.
3. Unscrew decorative valve cover (C3) from valve lock nut (C2) by hand.
4. Using an adjustable spanner and whilst holding the tap body firmly, unscrew valve lock nut (C2).
5. Vertically pull away valve (C1) from the valve chamber of tap body (B1)
6. Clean the Inside of the valve chamber of the tap body (B1) with a soft wet cloth.
7. Locate the new valve (C1) and reassemble the tap in reverse order. **Important; ensure the locating pegs of the valve (C1) locate in the valve chamber whilst tightening locknut (C2).**

To replace the spout o-rings:

1. Using a 2mm Allen key unscrew grub screws (A5) and gently lever (A6) away from the top of (A11).
2. Gently ease away spout (A4) from the lower spout section (A11) ensuring O-ring (A7) and PTFE spacers (A8) are kept safe.
3. Carefully swap o-rings (A9) & (A10) with the replacements using a precision screwdriver remove.
4. Reassemble the tap in reverse order.

Note that o-ring (A12) is a non-moving part and thus should not require changing. Parts (A7) & (A8) can be replaced if supplied although these are non-sealing.

To replace the diverter:

1. Unscrew the spout (A11) at its base by hand. Note that if it is not possible to unscrew (A11) by hand you should use an adjustable spanner with a soft cloth placed in between the jaws of the spanner and the flats of the spout base.
2. With the provided diverter removal tool unscrew the diverter valve (A13)
3. With a soft damp cloth clean the inside of spout chamber (B1)
4. Replace the new diverter (A13) and reassemble the tap in reverse order.

To replace the handspray and seal:

5. Lift handspray (H1) from base (K1)
6. Unscrew handspray (H1) from hose connection (J1)
7. Screw the new handspray onto connection (J1) ensuring rubber seal (H3) is in place.