


Hex Monobloc

abode

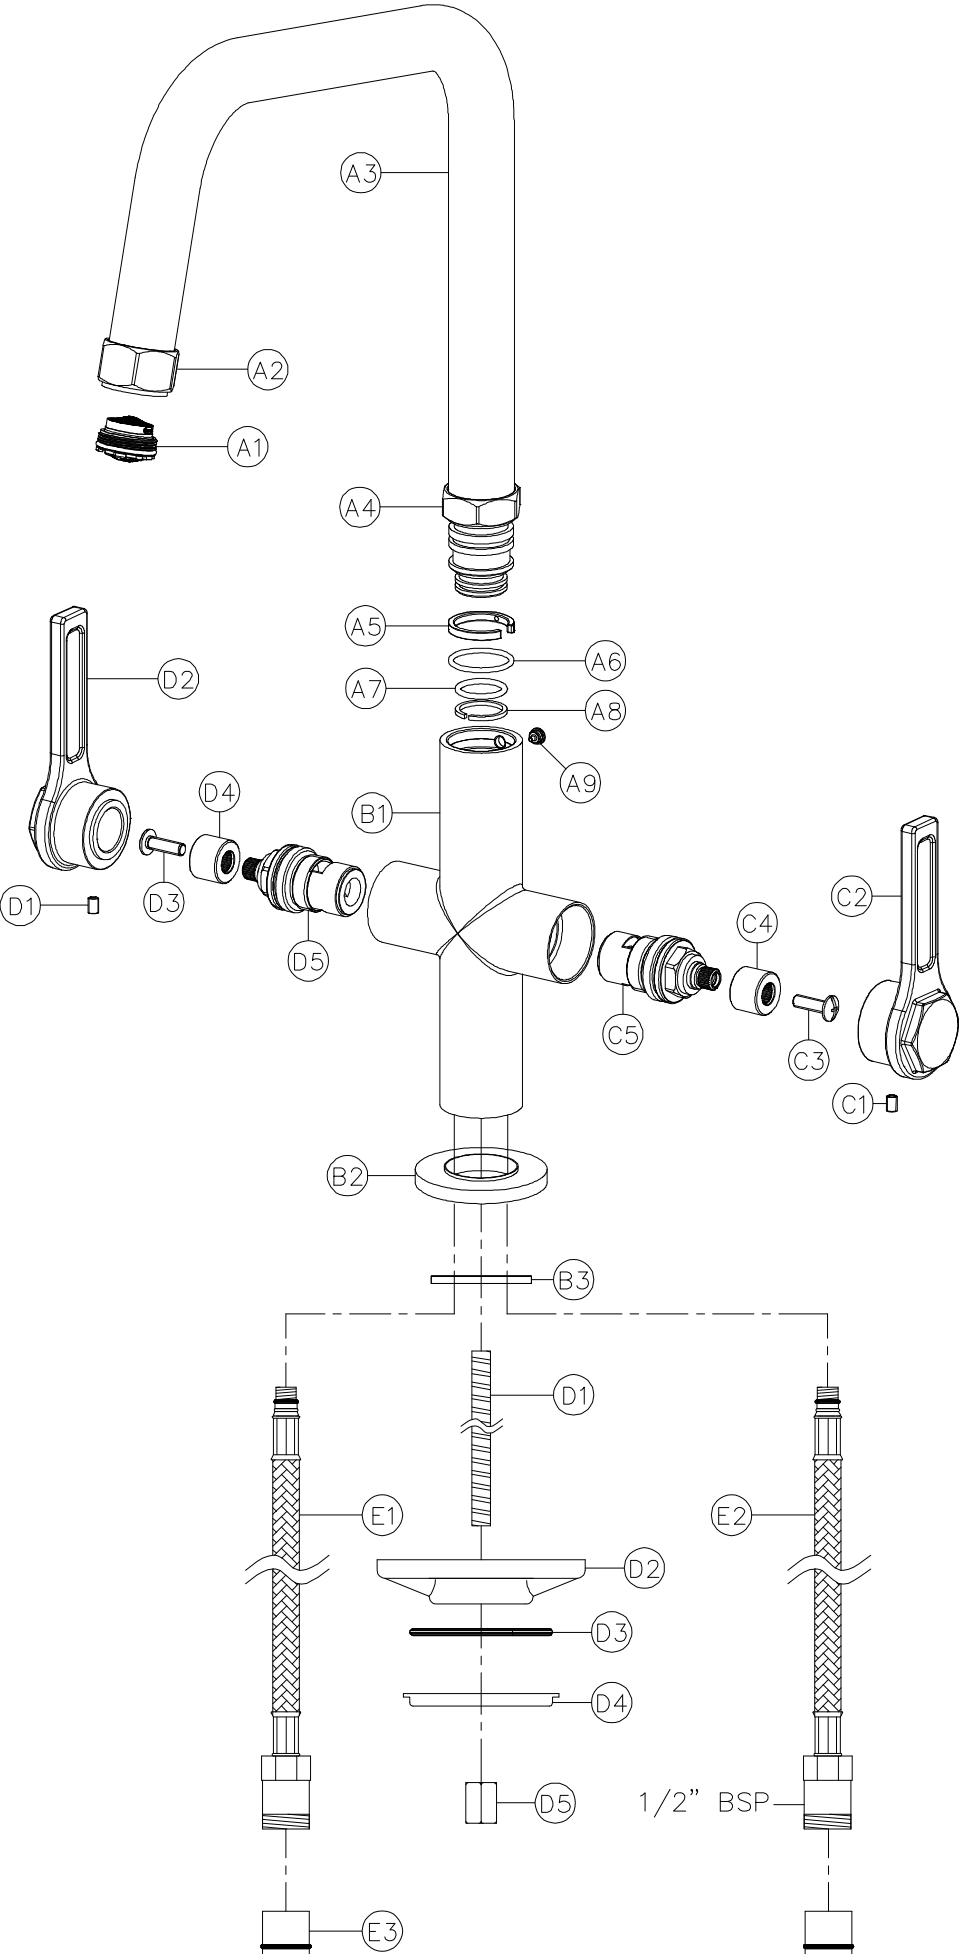

General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

To replace the cold valve:

1. Loosen grub screw (C1) on the underside of handle (C2) using a 2.5mm A/F Allen key.
2. Pull handle (D2) horizontally away from the body (B1).
3. Unscrew (C3) and pull bush (C4) away from valve (C5)
4. Using a socket unscrew valve (C5) anticlockwise.
5. Replace the faulty valve (C5) with the new one and assemble in reverse order.

To replace the spout O-rings:

1. Loosen grub screw (A9) on the back of body (B1) using a 3.0 mm A/F Allen key.
2. Pull the spout (A3) vertically away from the tap body (B1).
3. Remove upper PTFE ring (A5 & A8) and O-rings (A6 & A7) using a precision screwdriver and replace with new ones.
4. Reassemble the tap in reverse order.