



## General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

## To replace the hot and cold valve:

1. Remove cap (A1) vertically from handle (A3).
2. Loosen grub screw (A2) on the bottom of handle (A3) using a 2.5mm A/F allen key.
3. Pull the handle (A3) horizontally away from the valve lock nut (B2).
4. Unscrew valve cover (B1) by hand horizontally away from tap body (D2).
5. Hold the body of tap (D2) firmly. Using an adjustable spanner unscrew the valve lock nut (B2).
6. Clean the Inside chamber of tap body (D2) and the inside of valve chamber (B4) with a soft wet cloth.
7. Reassemble the tap in the reverse order replacing valve (B3).

## To replace the hose:

1. Disconnect hose (C5) from outlet adaptor (F4).
2. Loosen grub screw (D1) on the side of tap body (D2) using a 2.0mm A/F allen key. Pull spout section (C6) vertically away from tap body (D2) passing hose (C5) through tap body (D2).
3. Unscrew spout lock (C3) by hand which will release black spout section (C2), unscrew spring (C4) from black section (C2).
4. Separate the hose (C5) and black spout section (C2) by unscrewing them with an adjustable spanner.
5. Replace the hose (C5) by passing it through the spout (C4) and spout section (C6).
6. Reassemble the tap in the reverse order replacing hose (C5). Ensure to include washer (F1).