


# Avoir pull out

abode

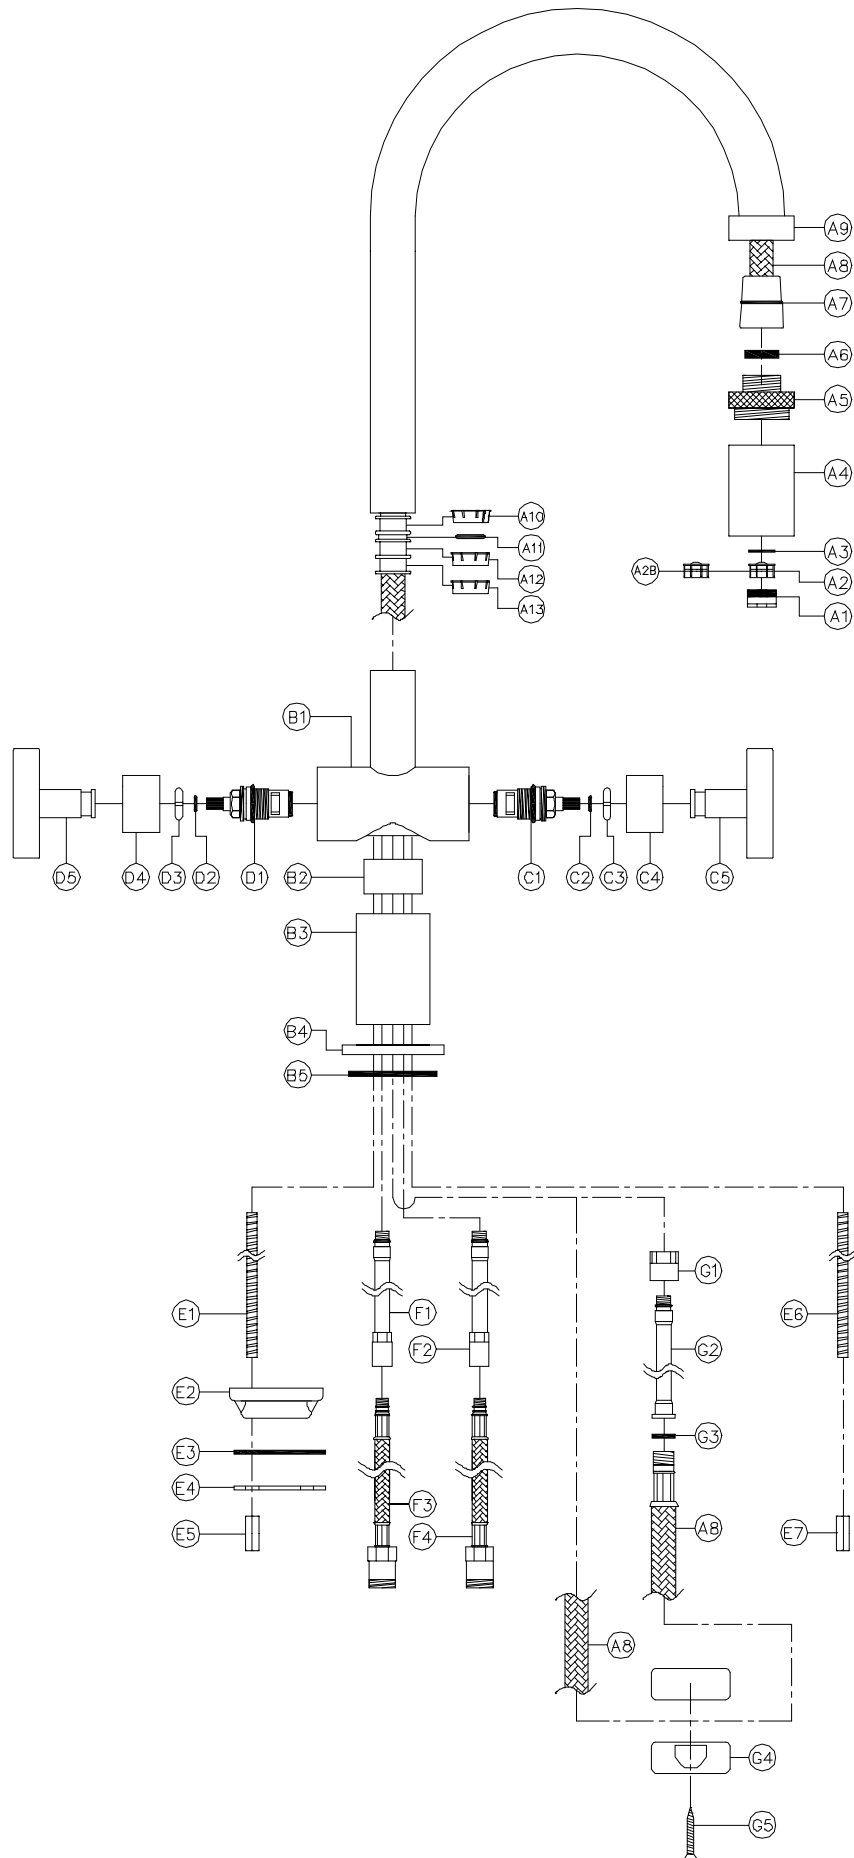

# Avoir pull out

## General Advice:

- These instructions are intended as a guide only, if you are in any doubt you should seek the advice of a qualified professional.
- Take care not to mark finished parts with screwdrivers or other tools.
- Use a pair of rubber gloves to get a better grip on decorative hand tight parts.
- Ensure all parts are reassembled tightly.
- After maintenance test that all assemblies are water tight and function correctly.
- Always isolate the hot and cold water supplies before starting any maintenance, once isolated you should drain any residual water from your system.

## To replace the hot valve:

1. Unscrew valve cover (D4).
2. Pull the handle assembly (D5, D4 & D3) horizontally away from the tap body (B1).
3. Remove o-ring (D2) from the valve (D1).
4. Unscrew valve (D1) using a 17mm spanner or adjustable wrench.
5. Clean any debris from the chamber of the tap (B1).
6. Reassemble the tap in the reverse order.

## To replace the hot handle:

1. Unscrew valve cover (D4).
2. Pull the handle assembly (D5, D4 & D3) horizontally away from the tap body (B1).
3. Remove the PTFE split ring (D3) from the handle (D5) using a small screwdriver or similar.
4. Pull the handle (D5) through the valve cover (D4).
5. Reassemble the tap in the reverse order.

## To replace the spout o-rings:

1. Whilst holding body (B1) pull the spout (A9) vertically, using a twisting action if required.
2. Remove the old O-ring (A11) using a small screwdriver or similar.
3. If worn, remove the white PTFE rings (A10 & A12-13).
4. Ensure the inside of the spout (A9) and the spout base (B1) is clean of dirt and grit.
5. If required locate the new white PTFE spacers rings (A10 & A12-13).
6. Carefully locate the new O-ring (A11) onto the spout base (B5).
7. Grease the O-ring (A11) thoroughly with silicone or alternative similar grease.

Note: the PTFE rings (A10 & A12-13) are designed to be a one way snap fit, when removing the spout some force may be required.

## To improve the water flow rate:

1. Unscrew the aerator housing (A1)
2. Remove aerator (A2) installed in the tap and replace with the high flow aerator (A2B) supplied separately with the tap.
3. Reassemble the aerator in the reverse order.